



## Option 8 — Relay Outputs

The B-Series has two solid state relays rated for +/-30 VDC or 24 VAC up to 0.5 A RMS load. Each relay can only be assigned one function at a time.

To access the Relay Outputs Setup menu in Display mode:

1. Press **D**.
2. Press **2** to invoke the Quick Jump option.
3. Press **8** for the **Relay Outputs Setup** menu, and then press **E**.

```
SELECT RELAY #  
>1
```

The Select Relay Number prompt appears.

4. Press **P** to continue.

Relay #1 is assigned to the ALARM OUTPUT and TOT PULSE OUT functions.

Relay #2 is assigned to the ALARM OUTPUT, TOT PULSE OUT, PURGE OUTPUT functions.

```
ASSIGN RELAY TO  
>ALARM OUTPUT ^v
```

5. Press **P** to review the settings for the second relay number, or press **H** to exit.

The main Display mode (DSP) prompt appears.