

## Option 2 — Low Flow Cutoff

To access the Flow Cutoff menu in Program mode:

- 1. Press P.
- 2. Enter your Advanced access password, and then press E.
- 3. Press 2 to invoke the Quick Jump option.
- 4. Press 2 for the Flow Cutoff menu, and then press E.

```
FLOW CUTOFF SW
>OFF
```

The Flow Cutoff Switch prompt appears.

The menu prompt allows you to determine a lower limit for recording flow. Any flow below that limit returns zero.

- 5. Press the arrow keys to switch from **OFF** to **ON**.
- 6. Press **E** to accept the change.

```
LO FLOW CUTOFF
>0.00000000 SCMH
```

The Lo Flow Cutoff prompt appears.

- 7. To change the value press **C** to clear all digits.
- 8. For each digit, press a number. Include the decimal if needed.
- 9. Press **E** to accept the new value and to return to the main Program mode prompt.

12.2015 Advanced Flow Meter Settings Low Flow Cutoff Option 2