



Option 26 — Setting Up A Delay for Boot Output

This is used to suspend data recording and allow the flow meter or the process to reach a steady state before reporting flow or velocity data to the 4-20mA outputs.

To access the Bootup Output Delay menu in Program mode:

1. Press **P**.
2. Enter your **Advanced** access password, and then press **E**.
3. Press **2** to invoke the Quick Jump option.
4. Press **26** for the **Bootup Output Delay** menu, and then press **E**.

```
BOOTUP OUT DELAY
>20          SEC
```

The prompt for setting the delay appears. You can specify a delay up to 120 seconds.

5. Use the numeric keys to enter the number of seconds, and then press **E** to return to the main Program prompt.