



Option 48 — Sensor Leakage

Note: This Option is used by Kurz for diagnostic and troubleshooting purposes.

To access the Sensor Leakage menu in Display mode:

1. Press **D**.
2. Press **2** to invoke the Quick Jump option.
3. Press **48** for the **Sensor Leakage** menu, and then press **E**.

```
SENSOR LEAKAGE
 21014          K
```

The Sensor Leakage prompt appears.

4. Press **H** to exit.

The main Display mode (DSP) prompt appears.